



1025 E. Waterford ~ Wakarusa, IN 46573 (574)862-2228 ~ Fax (574)862-2202 ~ www.Livinlite.com

TENT CLEANING TOP & SIDE MATERIAL CLEANING RECCOMENDATIONS

CLEANING YOUR TENT

To clean your tent, brush dry with a soft bristle brush. Additionally, you may use clean tap water and a soft brush, using mild soap and rinsing with water from a hose and spray nozzle. If the fabric has been exposed to salt water, wash with a hose using tap water

- Do **NOT** use a power washer for cleaning
- Do **NOT** use solvents or detergents
- Do **NOT** use aerosol cleaners

If insect repellents are used around the fabric, do not spray directly on fabric. An agent used in most sprays as a propellant will damage or destroy water repellent finishes (hair sprays, insect sprays, deodorants, etc.).

Do **NOT** touch your canvas while it is raining. Water will wick through and appear to make it leak.

If you have stains or a particular problem, contact your dealer before trying solvents that may damage your unit. Clean only the vinyl exterior with mild soapy water or vinyl cleaner, available at www.veada.com.

OTHER CARE TIPS

Your plastic windows have a -20°F cold crack rating. You must bring the unit into a warmer area, allowing the plastic windows to acclimate, before opening in extremely cold temperatures to prevent damage to your windows.

5/17/11